

# Assembly Instructions For TT-Scale Dodge Power Wagon



[www.eaelec.com](http://www.eaelec.com)

Made in Canada

The DodgePower Wagon was mechanically derived from the WC series of 3/4 ton military trucks. Introduced in 1946 as the first post-war civilian production 4x4 truck; it featured an enclosed all-weather cab, an 8-foot cargo box, 126 inch wheelbase and a 230 cubic-inch flathead inline-six engine.

3D printed parts Included in the kit:

- A. chassis/engine
- B. cab/cargo box
- C. floor/fender section
- D. Spare tire

Also includes 1 decal.

Required to complete the kit:

Paint - Gloss red, flat steel, silver & glosscoat

Glue - Slow setting CA is best.


Tools Required:

1. X-acto knife with a sharp #11 blade.
2. #400 and #600 sandpaper.



**WARNING: CHOKING HAZARD**  
Keep out of reach of small children!

Note that these ARE NOT TOYS, AND ARE NOT INTENDED FOR USE BY CHILDREN UNDER AGE OF 14. These products are model railroad equipment and accessories intended for use by adults.

## Parts in the Kit

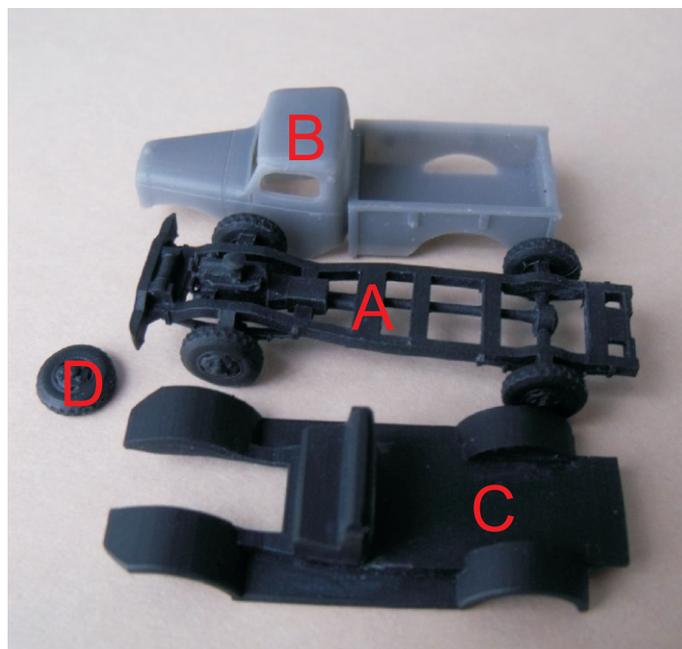


The 3D printing process requires a supporting frame during printing, see below left. The printed part is cut from the frame using flush cutters and this sometimes leaves small bumps on the part. Use a knife with a sharp new blade to cut away the bumps. When trimming bumps off the wheels you should place the wheel on a flat surface as shown below on the right. Putting too much stress on the wheel can cause the axle to break. For bumps on the cab body, sanding is recommended.

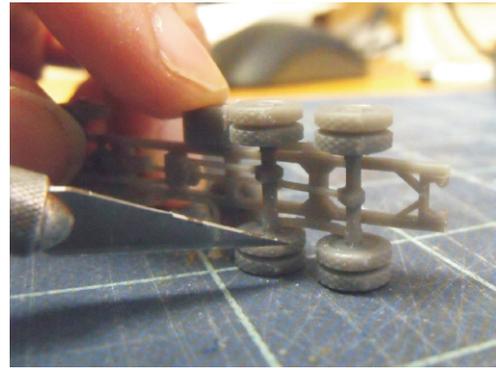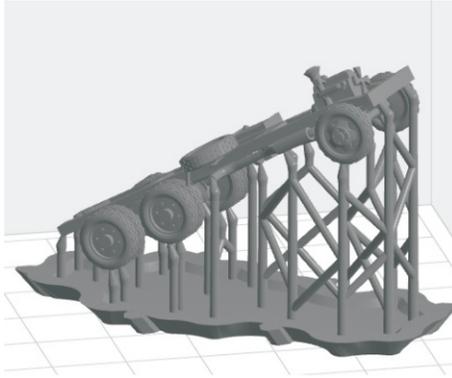


After cleaning up the bumps, paint the cab/cargo bed gloss red and spray the floor/fender section with glosscoat to give it a gloss finish (see painting guide on page 3). When these are completely dry, paint the headlight lens silver. Paint the winch drum flat steel. Apply the decal to the tailgate, once the decal is dry, spray the tailgate with glosscoat to protect the decal.

When everything is dry, assemble the truck as shown below using CA glue.


Step 1 - Glue floor/fender section to chassis

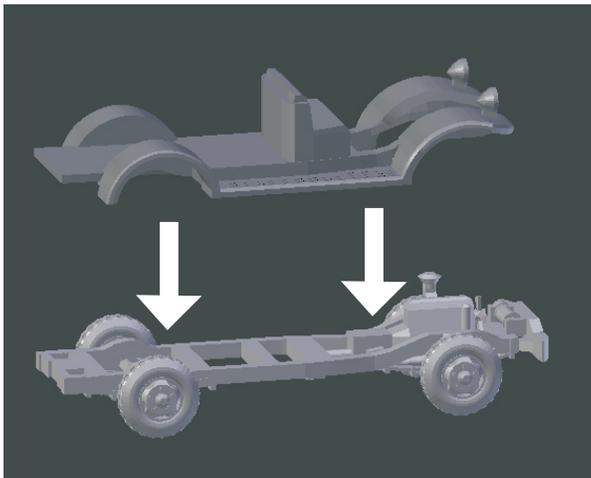

Step 2 - Glue cab/bed to floor/fender section

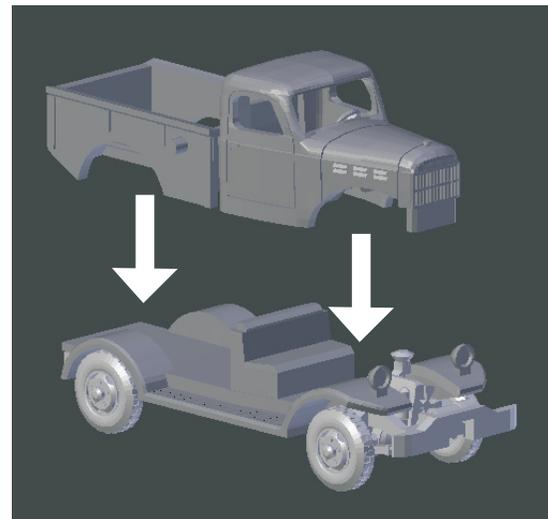

Step 3 - Glue spare tire to cab/bed

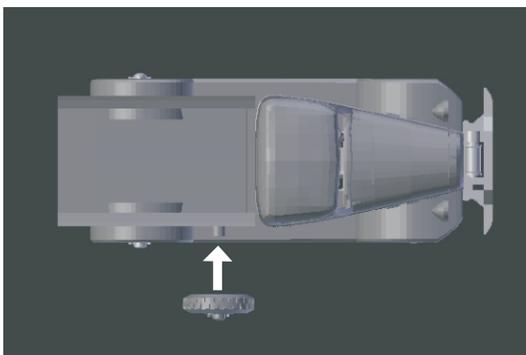


Assembly completed




# Dodge Power Wagon, Painting & Decal Guide


Left View

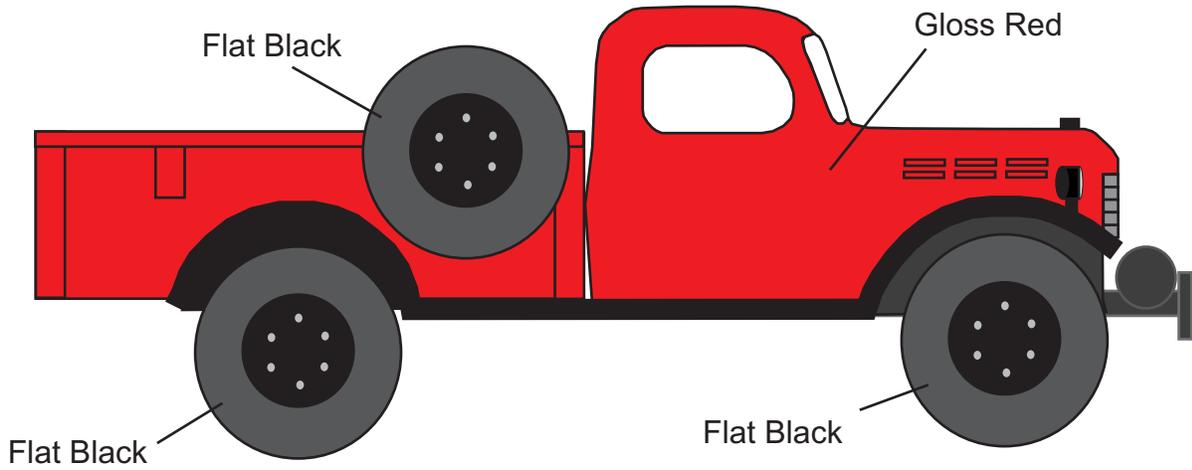

Top View

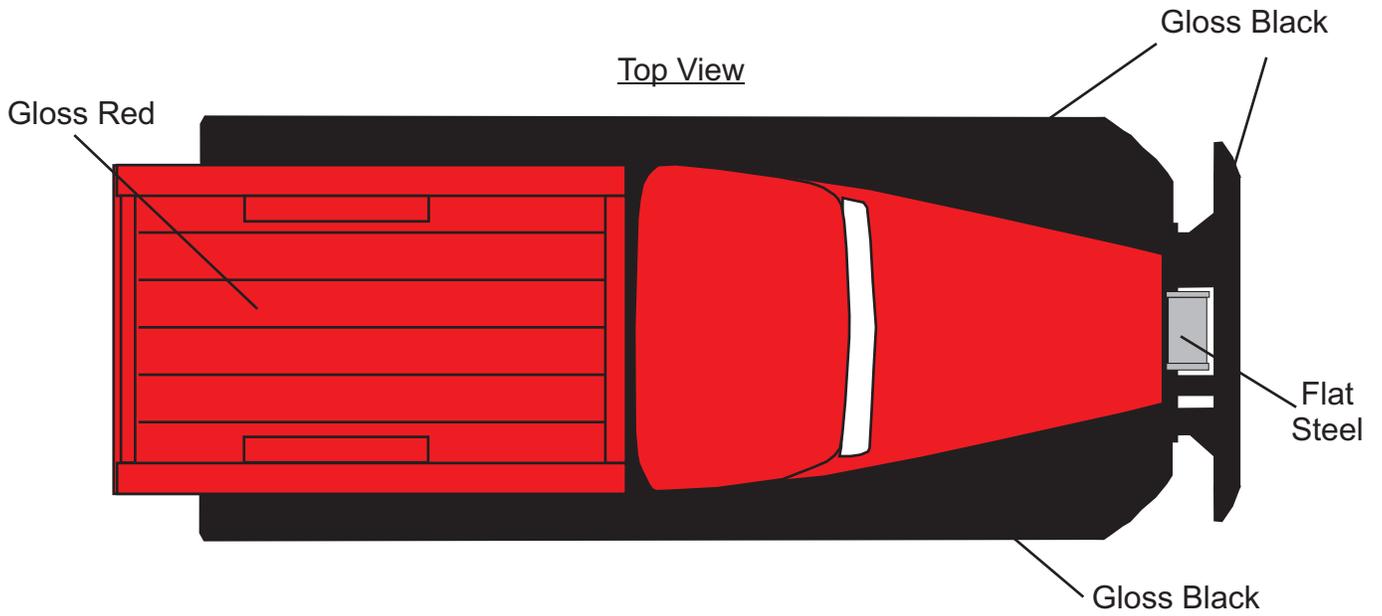

Front View

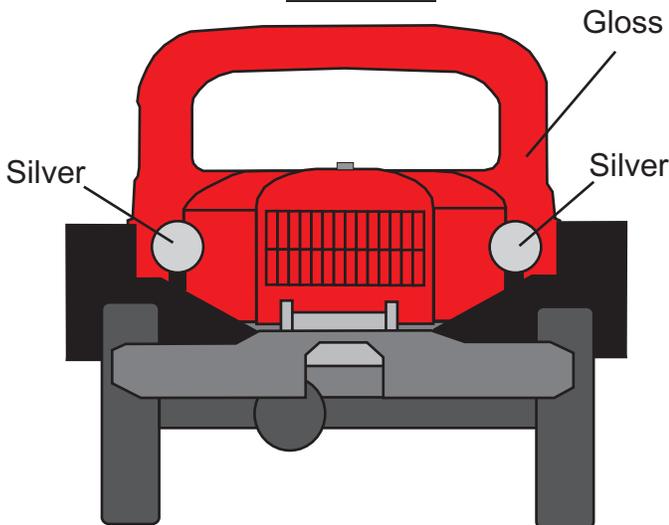

Back View

