

Assembly Instructions For TT Scale Studebaker US6 2 ½ ton Cargo Truck

WARNING: CHOKING HAZARD
Keep out of reach of small
children!



Note that these ARE NOT TOYS,
AND ARE NOT INTENDED FOR
USE BY CHILDREN UNDER
AGE OF 14. These products are
model railroad equipment and
accessories intended for use by
adults.

www.eaelec.com
Made in Canada
Decals Printed in the USA

Production of the US6 truck started in 1941 and over 200,000 were built during World War 2. Over 150,000 were exported under the lend-lease program mostly to Russia. The US military used these trucks in the construction of the Burma Road and in North America on the Alcan (Alaska) highway.

Parts Included in the kit:

- A. 3D printed chassis.
- B. 3D printed cab
- C. 3D printed cargo bed
- D. Decal

Required to complete the kit:

Paint - Flat black, silver, glosscoat, dullcoat

Paint - Flat army olive for US Army

(Testors 1165 or Tamiya XF49)


Paint - Flat army green for Red Army (Humbrol 76 or Tamiya XF74)

Glue - Slow setting CA is best.


Tools Required:

- 1. X-acto knife with a sharp #11 blade.
- 2. #400 and #600 sandpaper.


Kit Contents

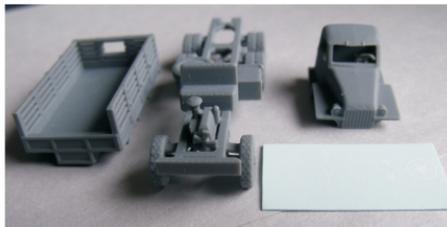


Option 1 - Open bed, closed hood

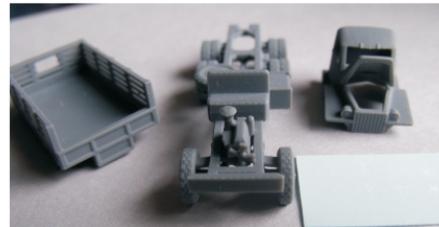

Option 2 - Open bed, open hood


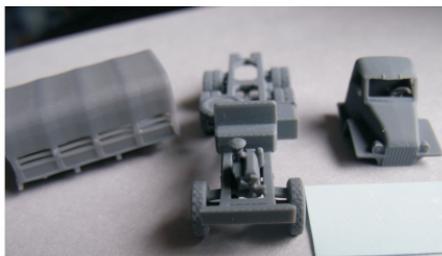


Option 3 - Covered bed, closed hood

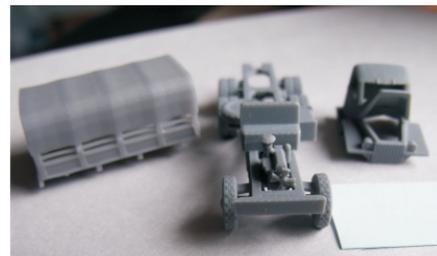


Option 4 - Covered bed, open hood

The 3D printing process requires a supporting frame during printing, see below left. The printed part is cut from the frame using flush cutters and this sometimes leaves small bumps on the part. Use a knife with a sharp new blade to cut away the bumps. When trimming bumps off the wheels you should place the wheel on a flat surface as shown below on the right. Putting too much stress on the wheel can cause the axle to break. For bumps on the cab body, sanding is recommended.

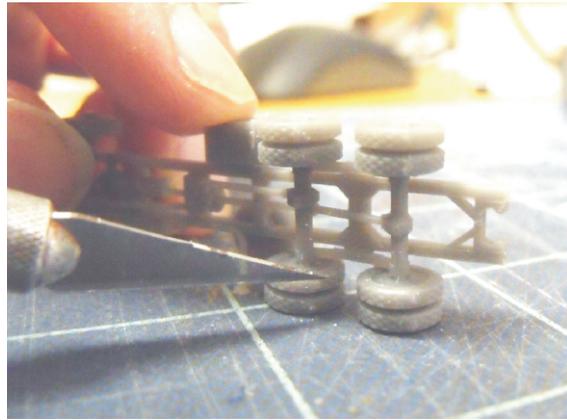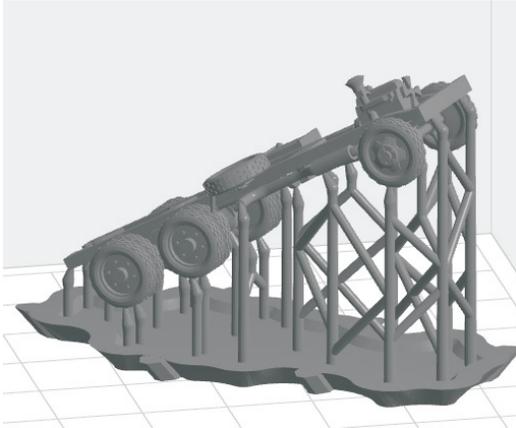

Painting Guide for Chassis


After cleaning up the bumps, paint chassis flat black as shown below. Once this has dried, paint the wheel hubs, fuel tank, etc., olive for US Army or green for Red Army/Warsaw Pact as shown below.

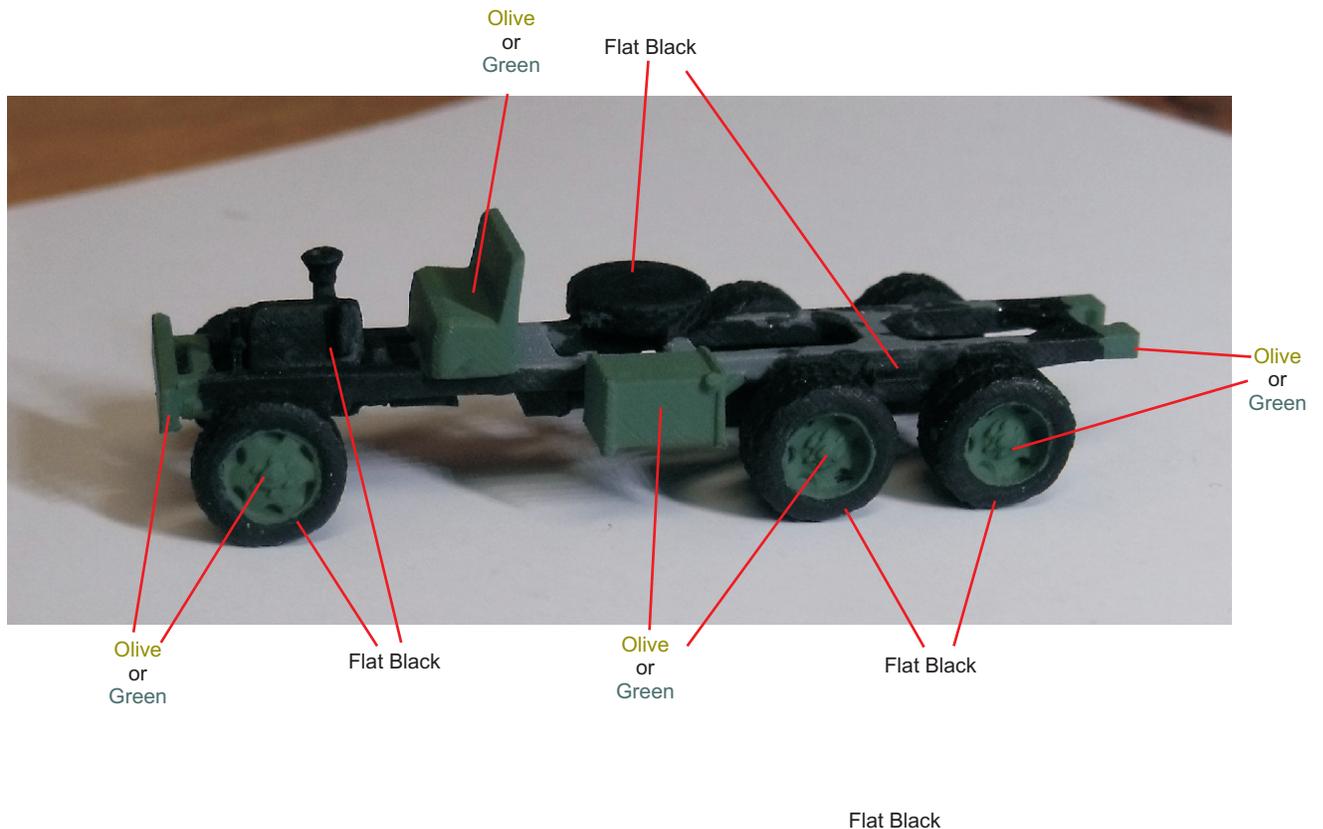

Painting Guide and Decal Placement for Cab and Bed


Paint the both the cab and cargo bed olive or green as shown below. Once these have dried apply a coat of gloss to the cab, let dry and then place the decals as show below. After the decals are completely dry, apply dullcoat to the cab. Paint the lens of headlights silver.

When everything is dry, proceed to final assembly on page 4.

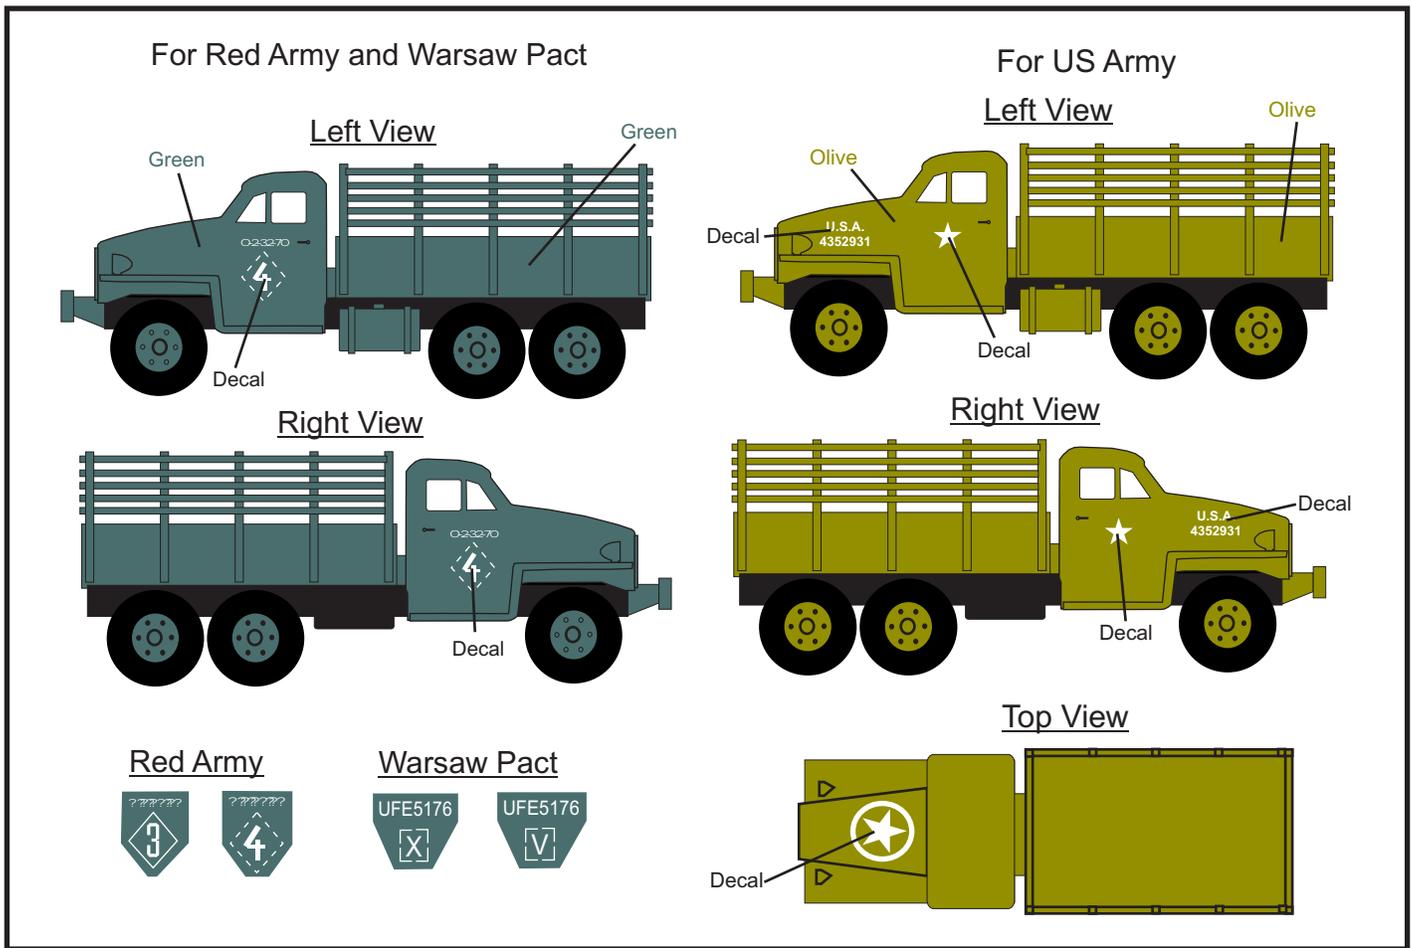


Final Assembly

After painting and decals are completed, assemble the truck as shown below using CA glue.

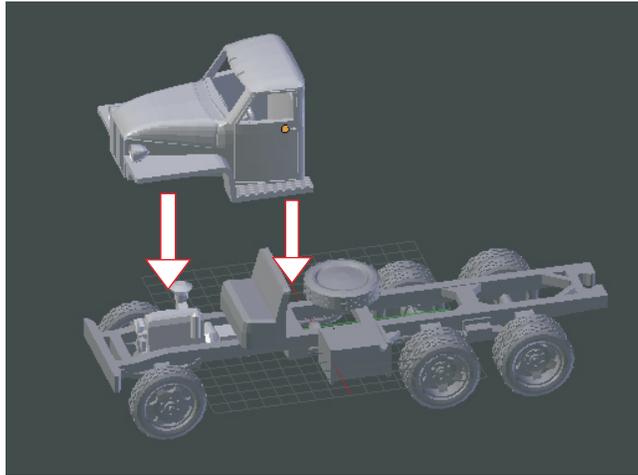

Step 1 - attach the cab to chassis

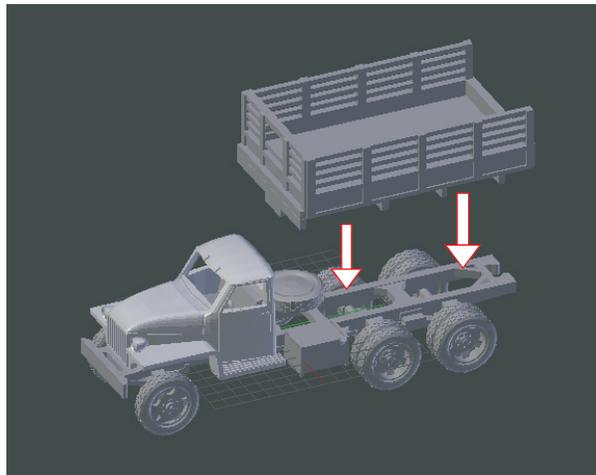

Step 2 - attach the cargo bed to the chassis



Assembly completed